


## Four-Slot Terminal Cradle

-HT730-

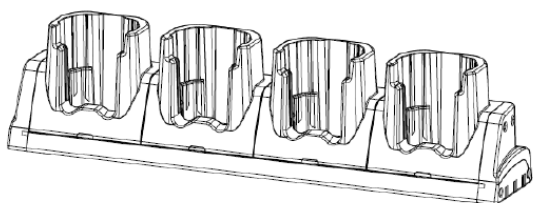

## Quick Start Guide

V1.1

### Package

Please make sure the following contents are in the gift box. If something is missing or damaged, please contact your unitech representative.


### The package contents

- HT730 Four-Slot Terminal Charging Cradle (PN#5000-900089G) or HT730 Four-Slot Terminal Ethernet Cradle (PN#5000-900091G)
- Power Supply (12V/ 5A) without power cord

### Optional accessories

- US power cord (P/N#1010-601551G)
- EU power cord (P/N#1550-602333G)
- UK power cord (P/N#1550-602689G)


### Product View

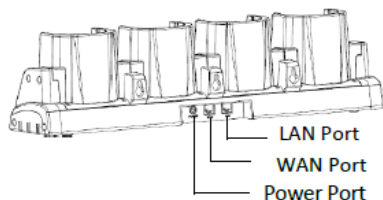

1. **LAN Port:** Used for connecting to a four-slot cradle. (Not available for terminal charging cradle)
2. **WAN Port:** Used for connecting to an Ethernet hub. (Not available for terminal charging cradle)
3. **DC Power Port:** Used for connecting to a power adapter.

### Power connection


- 1) Plug the AC power cord into the power jack on the power adapter.
- 2) Plug the other end of the AC adapter into an electrical outlet.
- 3) Plug the power adapter cable into the DC in port of the cradle.

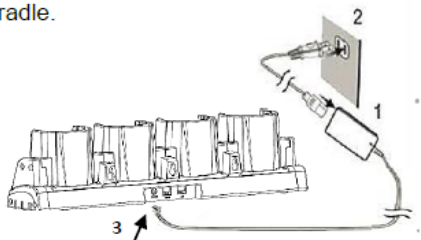

### How to use HT730 4-Slot Cradle


There are two options to charge the HT730 terminal :

- Charge HT730 without the bumper case on.
- To charge HT730 with bumper case, please remove the detachable part from the cradle. (Please refer to the picture below).

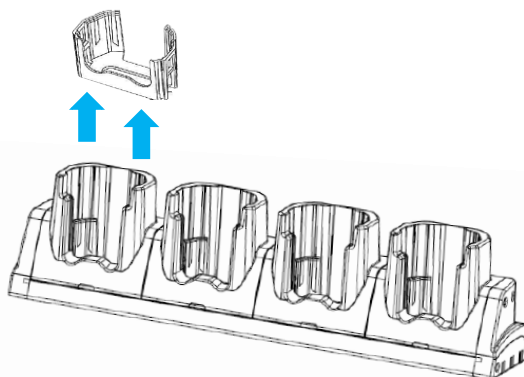

### How to remove the detachable part


There are two hooks on each side of the cradle, use your thumb to lift up to take out the detachable part. Once it got unhooked, you can lift it up from both sides.

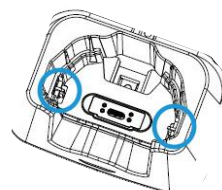



## Charging Terminals with the cradle

You can charge up to four terminals at one time in the cradle.

- 1) Be sure the cradle is connected to a power source.
- 2) Slide the terminal into the cradle.
- 3) The cradle will automatically detect the presence of the terminal and begin charging.
- 4) The LED indicator on HT730 will show red light when HT730 is charging.
- 5) The LED indicator on HT730 will show green light when HT730 is fully charged.

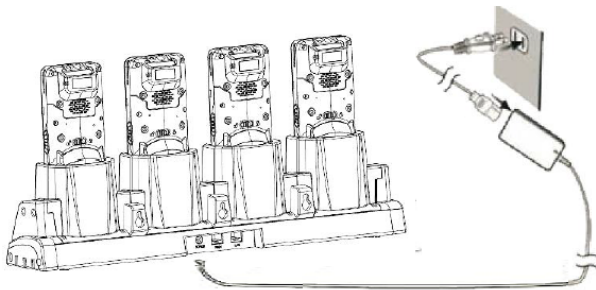

## Checking the LED status

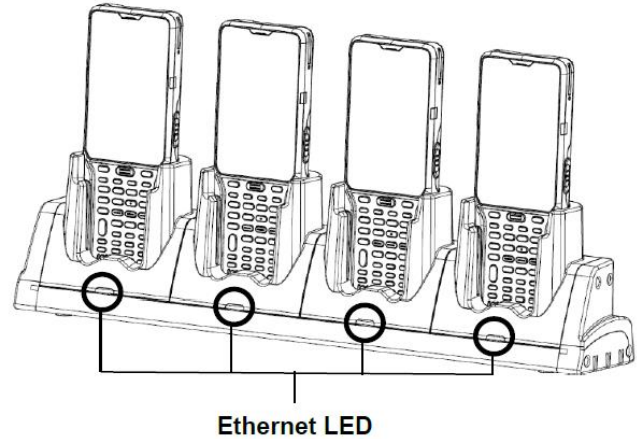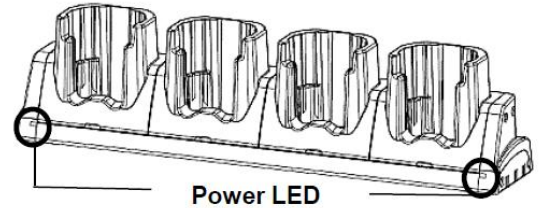

■ Ethernet cradle	
<b>Power LED (on both sides)</b>	<b>Description</b>
Red Light	Power supply is connected.
<b>Ethernet LED</b>	<b>Description</b>
Solid Blue light & Red light blinking	Ethernet communication

■ Charging only cradle	
<b>Power LED (on both sides)</b>	<b>Description</b>
Red Light	Power supply is connected.

**CAUTION!**

- To ensure the unit working properly, please keep all connectors away from the contaminants staying inside of them such as dust, grease, mud, and water. The negligence may cause the unit with no communication, short circuited, overheated and so on.
- If the connector is damaged, please ensure the connector is being fully repaired before using the unit to avoid causing short circuited.

